

SunVideo Plus 1.3 User's Guide

901 San Antonio Road Palo Alto, , CA 94303-4900

> Part No: 806-2818-10 September 1999, Revision A

USA 650 960-1300 Fax 650 969-9131



SunVideo Plus 1.3 User's Guide

Part No: 806-2818-10 September 1999, Revision A Copyright Copyright 1999 Sun Microsystems, Inc. 901 San Antonio Road, Palo Alto, California 94303-4900 U.S.A. All rights reserved. This product or document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers . Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd. For Netscape Communicator<sup>™</sup>, the following notice applies: Copyright 1995 Netscape Communications Corporation. All rights reserved.

Sun, Sun Microsystems, the Sun logo, AnswerBook2, docs.sun.com, and Solaris are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

architecture developed by Sun Microsystems, Inc. The OPEN LOOK and Sun<sup>M</sup> Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

RESTRICTED RIGHTS: Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95) and DFAR 227.7202-3(a).

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright 1999 Sun Microsystems, Inc., 901 San Antonio Road, Palo Alto, Californie 94303-4900 U.S.A. Tous droits réservés.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd. La notice suivante est applicable à Netscape Communicator<sup>TM</sup> : Copyright 1995 Netscape Communications Corporation. All rights reserved.

Sun, Sun Microsystems, le logo Sun, AnswerBook2, docs.sun.com, et Solaris sont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

et sont des marques de fabrique ou des marques deposees de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc. L'interface d'utilisation graphique OPEN LOOK et Sun<sup>™</sup> a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

CETTE PUBLICATION EST FOURNIE "EN L'ETAT" ET AUCUNE GARANTIE, EXPRESSE OU IMPLICITE, N'EST ACCORDEE, Y COMPRIS DES GARANTIES CONCERNANT LA VALEUR MARCHANDE, L'APTITUDE DE LA PUBLICATION A REPONDRE A UNE UTILISATION PARTICULIERE, OU LE FAIT QU'ELLE NE SOIT PAS CONTREFAISANTE DE PRODUIT DE TIERS. CE DENI DE GARANTIE NE S'APPLIQUERAIT PAS, DANS LA MESURE OU IL SERAIT TENU JURIDIQUEMENT NUL ET NON AVENU.





# Contents

	Preface viii
1.	Introduction to SunVideo Plus 1
	SunVideo Plus Features 1
	SunVideo Plus Specifications 2
	Frame Rates 3
	SunVideo Plus Software Packages 4
	SunVideo Plus Hardware 4
2.	Installing SunVideo Plus 7
	Installation Kit 7
	Installation Requirements 7
	Unpacking the SunVideo Plus Card 8
	Installing the SunVideo Plus Card 8
	SunVideo Plus 1.3 Software Contents 9
	Removing Previous Software Releases 10
	Installing the SunVideo Plus Software 11
	Setting Your Environment 13
	Setting Olkhome 13
	Modifying the PATH Variable 14
	Setting XIL Environment Variables 14

Contents iv

Assigning Device Numbers 15 Installation Quick Test 15 3. SunVideo Compatibility Mode 17 System Requirements 17 Limitations 18 Using SunVideo Compatibility Mode 18 Running SVC Mode Scripts 19 The svc\_install Script for Solaris 2.5.1 19 The svc\_install Script for Solaris 2.6 20 The svc\_uninstall Script for Solaris 2.6 21 The svc\_devices Script 22 Setting SVC Environment Variables (Solaris 2.5.1 only) 22 4. SunVideo Plus Example Programs 25 Audio Recording 26 Audio Playing 27 Audio Looping 28 The soundtool Program 29 Using the SunVideo Plus Control Panel 31 Image Compression 32 Example Usage 33 Image Decompression 34 Example Usage 35 Video Display 35 Example Usage 37 Video Broadcast and Video Receiver 37 The xil\_video\_broadcast Program 37 The xil\_video\_receiver Program 39 Example Usage 40

SunVideo Plus 1.3 User's Guide 
 September 1999, Revision A

v

Video Broadcast and Video Receiver for H.261 40 The xilh\_video\_broadcast Program 40 Audio Video Conferencing 42 The xilh\_video\_receiver Program 42 The olk\_conf Command 43 XIL Attributes for SunVideo Plus 49 Attributes Overview 50 General Attributes 51 DEVICE\_NAME 51 PORT\_V 51 PORT 51 FORMAT\_V 52 FORMAT 52 IMAGE\_SKIP 52 MAX\_BUFFERS 52 NUM\_BUFFERS 53 FULL\_BUFFERS 53 FLUSH\_BUFFERS 53 Video Attributes 53 HUE 53 CHROMA\_GAIN\_U 53 CHROMA\_GAIN\_V 54 CONTRAST 54 LUMA\_BRIGHTNESS 54 H.261 Attributes 54 H261\_BIT\_RATE 54 H261\_MAX\_QUANT 54 H261\_IBLOCK\_REFRESH 54

5.

Contents vi

H261\_FUR 55

H261\_PIP 55

HW\_DECOMPRESS\_CIS 55

Important Attribute Information 55

Video Ports, Formats, and Auto Format Detection 55

HW Decompression and CIS Selection 56

HW Decompression and Creating an XIL Device 56

Using Both HW Compression and HW Decompression 56

The SunVideo Plus Control Panel and XIL Attributes 57

Molecules 57

Errors 58

Creating a Sample MMAColk Device Image 59

XIL Source Examples 59

Glossary 61

#### Preface

This manual describes how to install and use the SunVideo<sup>TM</sup> Plus 1.3 subsystem with your Sun<sup>TM</sup> computer system. It is intended for end users and system administrators.

# How This Book Is Organized

Chapter 1 provides an overview of the SunVideo Plus product.

Chapter 2 lists installation requirements and describes how to install hardware and software for the SunVideo Plus card.

Chapter 3 describes SunVideo Plus and SunVideo compatibility mode.

Chapter 4 provides programming tools and XIL program examples.

Chapter 5 provides SunVideo Plus XIL programming attributes.

# Using UNIX Commands

This document may not contain information on basic UNIX<sup>®</sup> commands and procedures such as shutting down the system, booting the system, and configuring devices.

See one or more of the following for this information:

- Solaris 2.x Handbook for Sun Peripherals
- AnswerBook<sup>™</sup> online documentation for the Solaris<sup>™</sup> 2.x software environment

Preface viii

• Other software documentation that you received with your system

# **Typographic Conventions**

TABLE P-1	Typographic	Conventions
-----------	-------------	-------------

Typeface or Symbol	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output.	Edit your .login file. Use ls -a to list all files. % You have mail.
AaBbCc123	What you type, when contrasted with on-screen computer output.	% <b>su</b> Password:
AaBbCc123	Book titles, new words or terms, words to be emphasized. Command-line variable; replace with a real name or value.	Read Chapter 6 in the User's Guide. These are called <i>class</i> options. You <i>must</i> be root to do this. To delete a file, type rm <i>filename</i> .

# **Shell Prompts**

IADLE P-2 SHELLFTUILIPUS	TABLE	P-2	Shell	Prompts
--------------------------	-------	-----	-------	---------

Shell	Prompt
C shell	machine_name%
C shell superuser	machine_name#

 TABLE P-2
 Shell Prompts (continued)

Shell	Prompt
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

#### **Related Documentation**

Refer to documentation supplied with your platform system for specific hardware installation procedures.

#### Sun Documentation on the Web

The docs.sun.com web site enables you to access Sun technical documentation on the Web. You can browse the docs.sun.com archive or search for a specific book title or subject at:

http://docs.sun.com

# Sun Welcomes Your Comments

We are interested in improving our documentation and welcome your comments and suggestions. You can email your comments to us at:

docfeedback@sun.com

Please include the part number of your document in the subject line of your email.

Х

#### Introduction to SunVideo Plus

The SunVideo Plus subsystem provides audio and video processing engines for a broad range of multimedia applications for Sun Peripheral Component Interface (PCI) based workstations. The SunVideo Plus subsystem provides simultaneous video and audio compression and decompression for Sun application products such as ShowMe<sup>TM</sup> and ShowMe<sup>TM</sup> TV<sup>TM</sup>. SunVideo Plus enables you to run SunVideo demonstration programs. The SunVideo Plus architecture enables you to easily integrate:

- Video cameras
- Microphones
- Headsets
- Software decoders
- Standard multimedia tools

The onboard video processor and audio digital signal processor (DSP) equip standard desktop computers, particularly those in networked environments, with the capability to run to audio/video-enabled applications for corporate training, security, authoring, telemedicine, and video conferencing.

## SunVideo Plus Features

The video input to the SunVideo Plus card can be either National Television System Committee (NTSC) or Phase Alternation Line (PAL) format, and composite or S-Video video sources. Decompressed and local video can transfer across the PCI-bus to be displayed on your workstation. Audio compression is performed by the onboard DSP.

A high-speed interface to the host bus provides multiple DMA/IO channels. These channels provide flow-through for:

- Output from a compressed video/audio bitstream
- Output from decompressed video
- Output from local uncompressed video

# SunVideo Plus Specifications

Feature	Description
Video inputs/ outputs	Two (2) Composite IN, one (1) S-Video IN
Input formats	NTSC or PAL
Video sampling	YUV (4:2:2)
Audio inputs	Line In or Microphone In (shared jack)
Audio outputs	Headphone Out, Line Out
Video compression	CellB, H.261, JPEG, MPEG1(CIF I-Frame) - NTSC only
Uncompressed video formats	YUV, 8-bit RGB, 24-bit RGB, 8-bit Y
Audio codecs	G.711 (Alaw, mlaw), G.722, G.728, PCM (8- or 16-bit), Acoustic Echo Suppression (AES)
Audio sampling rates	Up to 44Khz (CD quality)
Audio output levels	4Vpp for Headphone
Hardware platforms	PCI-bus Sun system
Software platforms	Solaris 2.5.1 and higher

 TABLE 1–1
 SunVideo Plus Specifications (continued)

Feature	Description
Bus slot type	Single slot, half length
SunVideo compatibility	Binary compatibility with all SunVideo card XIL-based applications
APIs	XIL Imaging library libaudio compatibility API
Demonstration applications	Video recording and playback TCP/IP video conferencing Audio recording and playback Sound monitor

# **Frame Rates**

Depending on your computer system's application load and display window size, the SunVideo Plus subsystem can display video rates of up to 30 frames-per-second (fps). Video frame rates are application dependent. SunVideo Plus subsystem supports the following compressors and frame rates:

Frame Rate
CIF - 20-28 fps, QCIF - 30 fps
12 fps
30 fps
30 fps
30 fps

 TABLE 1–2
 Frame Rates

Introduction to SunVideo Plus 3

# SunVideo Plus Software Packages

Your SunVideo Plus card comes with the following software packages:

- SUNWolkpd.u (Device Driver)
- SUNWo1kpu (Runtime Scripts)
- SUNWolkx (XIL 1.2 Runtime libraries Solaris 2.5.1 only)
- SUNWolkx (XIL 1.3 Runtime libraries Solaris 2.6 and Solaris 7 only)

See Chapter 2 for software installation procedures.

# SunVideo Plus Hardware

The SunVideo Plus card is installed in a PCI-bus slot. The card contains two Composite IN ports, and one S-Video IN port. For audio signals, SunVideo Plus also contains one port for line level OUT, one port for headphone level OUT, and one input port that can be configured through the software as either line or microphone level IN.

The following figure shows the SunVideo Plus PCI card.



Figure 1-1 SunVideo Plus PCI Card

The following figure shows the SunVideo Plus card backplate connection outlay.



*Figure 1–2* SunVideo Plus PCI Card Backplate

SunVideo Plus supports both Composite and S-Video inputs. S-Video can provide a much sharper image than Composite video, with better color separation. S-Video uses a four-pin, mini-DIN connector, which provides separate Y (luminance) and C (chrominance) signals.

See Chapter 2 for software installation procedures.

Introduction to SunVideo Plus 5

SunVideo Plus 1.3 User's Guide 
September 1999, Revision A

# **Installing SunVideo Plus**

This chapter contains information for installing and setting environments for the SunVideo Plus hardware and software. It also describes how to connect video input devices to your Sun system through the SunVideo Plus board.

You must be able to become superuser to successfully install SunVideo Plus. If you do not know the root password of the system on which you are installing SunVideo Plus, contact your system administrator.

#### **Installation Kit**

The SunVideo Plus 1.3 Installation Kit includes:

- SunVideo Plus 1.3 card
- SunVideo Plus 1.3 software (CD)
- Antistatic wriststrap
- SunVideo Plus 1.3 Installation Guide

#### **Installation Requirements**

To successfully install SunVideo Plus, you need a SPARC<sup>TM</sup> system running Solaris 2.5.1, Solaris 2.6, or Solaris 7 operating enironments..

# Unpacking the SunVideo Plus Card

The SunVideo Plus board is packaged and shipped in an antistatic envelope that protects it from static electricity. Be sure to save this envelope and all shipping package materials; these materials must be used if re-shipment is necessary. When handling the board, use extreme care and avoid touching delicate electronic components. When unpacking the board, do the following:

- 1. Immediately inspect the shipping container for evidence of damage. If the carrier's agent is not present when the container is opened and the contents are found to be damaged, keep all contents packing materials for the agent's inspection.
- 2. If you find no evidence of damage, carefully remove the card from its container.



**Caution -** Printed circuit boards, such as SunVideo Plus, are made of delicate electronic components that are extremely sensitive to static electricity. Ordinary amounts of static from your clothes or work environment can damage them. Handle these boards only by the non-conducting edges. Do not touch the components on the board or any metal parts. Wear a grounding strap when handling the board. Do not disconnect the power from your system power receptacle. This connection provides the ground path necessary so that you can safely remove and install the board and other components. Be sure that the system power is turned off.

# Installing the SunVideo Plus Card

- 1. Install the SunVideo Plus card according to the installation procedures for PCI-bus cards provided with your Sun<sup>TM</sup> system.
- 2. After installing the SunVideo Plus card and securing your system enclosure, boot your system by typing:



SunVideo Plus 1.3 User's Guide 
September 1999, Revision A

# SunVideo Plus 1.3 Software Contents

Your SunVideo Plus subsystem includes the following software installed during the the pkgadd process:

Contents	Description	Solaris Software Support
Docs/	Translated User's Guide	Common to each Solaris release.
C/	English German	
de/	Spanish	
es/	French	
fr/	Italian Japanese	
it/	Korean	
ja/	Swedish	
ko/	Simplified Chinese Traditional Chinse (BIG5)	
sv/		
zh/		
zh_TW.BIG5		
Common/	Runtime libraries OPI runtime libraries	All packages under the Common/ directory support Solaris 2.5.1,
Packages/		Solaris 2.6, and Solaris 7.
SUNWolkpu	OPI device support	
SUNWopi	AnswerBook SunVTS test	
SUNWopilk		
SUNWsvpab		
SUNWvtsvp		

 TABLE 2–1
 SunVideo Plus 1.3 Software Contents

Installing SunVideo Plus 9

Contents	Description	Solaris Software Support
Solaris_2.5.1/	Device driver	Solaris 2.5.1 Hardware: 4/97, 8/97, and 11/97
Packages/	XIL1.2 Runtime	
SUNWo1kpd.u		
SUNWolkpx		
Solaris_2.6/	Device driver	Solaris 2.6 and Hardware: 3/98 and 5/98
Packages/	XIL1.3 Runtime	
SUNWolkpd.u		
SUNWolkpx		
Solaris_7/	Device driver	Solaris 7 and Hardware: 3/99, 5/ 99, 8/99 and 11/99
Packages/	XIL1.3 Runtime	
SUNWolkpd.u		
SUNWolkpx		

TABLE 2-1 SunVideo Plus 1.3 Software Contents (continued)

Once installed, the SunVideo Plus 1.3 software resides in /etc/opt/SUNWolkp, /opt/SUNOlkp, and /opt/SUNWopi. The XIL Runtime pipeline software resides in /usr/openwin.

# **Removing Previous Software Releases**

You must remove any previous releases of the SunVideo Plus software before installing any new software packages.

- 1. Log in as superuser.
- 2. Uninstall the SunVideo Plus 1.0, 1.1, or 1.2 software packages.

**Note** - SUNWolkpu and SUNWolkpd are core packages; hence, be sure that these packages are removed *last* by the pkgrm command.

Remove SunVideo Plus 1.0 by typing:

hostname# /usr/sbin/pkgrm SUNWvtsvp SUNWsvpab SUNWolkpu SUNWolkpd

Remove SunVideo Plus 1.1 or 1.2 by typing

hostname# /usr/sbin/pkgrm SUNWytsvp SUNWsvpab SUNWolkpx SUNWolkpu

## Installing the SunVideo Plus Software

The SunVideo Plus 1.3 software is provided on the CD included with your SunVideo Plus 1.3 installation kit.

- 1. Log in superuser (root).
- 2. Insert the SunVideo Plus 1.3 CD into the CD-ROM drive connected to your system.
  - If your system is running Volume Manager, it should automatically mount the CD-ROM to the /cdrom/sunvideo\_plus\_1\_3 directory.
  - If your system is not running Volume Manager, mount the CD-ROM as follows:

hostname# mkdir -p /cdrom/sunvideo\_plus\_1\_3
hostname# mount -F hsfs -r /dev/dsk/c0t6d0s2 /cdrom/sunvideo\_plus\_1\_3

- 3. Install the SunVideo Plus 1.3 software using the pkgadd command:
  - a. Install the base software packages for the Solaris 2.5.1, Solaris 2.6, and Solaris 7 operating environments:

Installing SunVideo Plus 11

Choose all to install the base packages.

- b. Proceed to install specific Solaris release software packages (Step b for Solaris 2.5.1, Step c for Solaris 2.6, and Step d for Solaris 7).
  - To install the Solaris 2.5.1 Hardware: 4/97, 8/97, and 11/97 operating environment, type:

```
hostname# cd /cdrom/sunvideo_plus_1_3/Solaris_2.5.1/Packages
hostname# /usr/sbin/pkgadd -d .
```

Choose all.

■ To install the Solaris 2.6 operating environment, type:

```
hostname# cd /cdrom/sunvideo_plus_1_3/Solaris_2.6/Packages
hostname# /usr/sbin/pkgadd -d .
```

Choose all.

• To install the Solaris 7 operating environment, type:

```
hostname# cd /cdrom/sunvideo_plus_1_3/Solaris_7/Packages
hostname# /usr/sbin/pkgadd -d .
```

Choose all.

1. After the software has been installed, unmount and eject the CD-ROM:

```
hostname# cd /
hostname# umount /cdrom/sunvideo_plus_1_3
hostname# eject cdrom
```

2. Reboot your workstation:

hostname# reboot -- -r

This enables the operating system to recognize the SunVideo Plus card.

# Setting Your Environment

The demonstration applications that are shipped with SunVideo Plus are designed to search the /opt/SUNWolkp/lib directory for the SunVideo Plus libraries. If the SunVideo Plus software has been installed in a location other than /opt/SUNWolkp, or if you are using other SunVideo Plus applications that do not automatically search this default directory, you must include the path to the SunVideo Plus libraries libolkusr and libotiaudio in your LD\_LIBRARY\_PATH pathname.

• To change the path with the sh or ksh shell environment, type:

hostname% LD\_LIBRARY\_PATH=/opt/SUNWolkp/lib:\$LD\_LIBRARY\_PATH hostname% export LD\_LIBRARY\_PATH

If you are using csh, type:

hostname% setenv LD\_LIBRARY\_PATH /opt/SUNWolkp/lib:\$LD\_LIBRARY\_PATH

#### Setting O1KHOME

The environment variable O1KHOME must also be set to the installation subdirectory. The default installation is shown below. If the SunVideo Plus software was installed

Installing SunVideo Plus 13

in a different subdirectory, the O1KHOME value must be set to the path of that subdirectory.

• Using sh or ksh environments, type:

hostname% O1KHOME=/opt/SUNWo1kp hostname% export O1KHOME

Using csh environment, type:

hostname% setenv O1KHOME /opt/SUNWo1kp

# Modifying the PATH Variable

For ease of operation, you may want to include the path to the SunVideo Plus applications in your PATH environmental variable.

Using sh or ksh environments, type:

hostname% PATH=/opt/SUNWolkp/bin:\$PATH hostname% export PATH

■ Using csh environment, type:

hostname% setenv PATH /opt/SUNWolkp/bin:\$PATH

# Setting XIL Environment Variables

Examples that use the Sun XIL<sup>TM</sup> library require that certain XIL environment variables are set. The following entries show how to set these variables assuming XIL was installed in the default location and that the variables are not already set.

• To set variables using the sh or ksh environments, type:

Using csh environment, type:

hostname% setenv LD\_LIBRARY\_PATH /opt/SUNWits/Graphics-sw/xil/lib: \$LD\_LIBRARY\_PATH hostname% setenv XILHOME /opt/SUNWits/Graphics-sw/xil

# Assigning Device Numbers

The operating system assigns device numbers for cards based on the card type, as well as the order that the cards were placed into the PCI-bus slots. When the first SunVideo Plus card is installed into an open slot, the operating system identifies the card as device /dev/olk0. If a second card is placed in an open slot, it is assigned device number /dev/olk1, and so on.

The operating system remembers the order of slots and SunVideo Plus device numbers, even if a card is removed and later replaced. So if the first SunVideo Plus card is moved to another slot, then the operating system will identify that card as /dev/olk2. If a new SunVideo Plus card is then placed into the same slot that the first SunVideo Plus card originally occupied, this new card will be known as /dev/olk0. Once a slot is named as a SunVideo Plus card slot, it retains that same address, regardless of which card actually occupies the slot.

#### **Installation Quick Test**

To verify proper installation and operation of the SunVideo Plus card and software, do the following:

- 1. Complete the installation of the SunVideo Plus card and software, and ensure that the XIL environment variables are correctly set.
- 2. Connect a video source to the Composite Port 1 of the card.

Installing SunVideo Plus 15

**Note -** If your video source is an S-Video device, connect the S-Video cable to the SunVideo Plus S-Video connector.

3. Run the xil\_display program to test the video capabilities of the card. Type:

hostname% xil\_display

This will display 99 frames, then it will exit.

If your video source is an S-Video device, type the following to use the S-Video source:

hostname% xil\_display -I 0

- 4. Connect an audio line input device to the audio input jack and connect speakers to the audio line output jack.
- 5. Run the olk\_audloop program to test the audio capabilities of the card. Type:

hostname% olk\_audloop

6. Press Control-c when finished.

# SunVideo Compatibility Mode

This chapter describes how to use the SunVideo Plus subsystem with existing software applications that use the Sun Microsystems XIL library and the SBus SunVideo card. This enables you to use a SunVideo Plus card to run SunVideo demonstration programs and applications such as Sun's ShowMe desktop videoconferencing products and ShowMe TV audio/video broadcasting product.

For using your Sun applications, refer to the user's guide provided with your Sun application product. For example, refer to the *SunVideo User's Guide* for using the SunVideo Demonstration Programs, or *ShowMe TV User's Guide* for use of the ShowMe TV program.

# System Requirements

- Software environment
  - Solaris 2.5.1 Hardware: 4/97 or later
  - Solaris 2.6
- Sun PCI desktop workstation
- XIL Imaging Library installed on your workstation

# Limitations

- SunVideo Plus does not provide hardware-based MPEG1 I-B-P compression and XIL does not provide a software-based compressor, Therefore, programs relying on these capabilities will fail. Also, SunVideo Plus MPEG1 encodes non-square-pixel video, so applications expecting MPEG1 in square-pixel format will fail.
- Error messages for SunVideo Plus are slightly different from SunVideo, so a program relying on trapping a particular error may not work.
- SunVideo Plus's XIL compatibility is the same as that of the XIL library. Applications that make calls directly to the SunVideo driver may not work correctly.
- If SunVideo Plus does not provide hardware acceleration for a given XIL molecule, the operation may be performed partly in software. This is currently true for some compression/resolution combinations.
- SunVideo Plus supports the JPEG, CellB, and MPEG-1 (I frame) codes under compatibility mode. It also supports the uncompressed formats. SunVideo Plus does NOT support H.261 or MPEG1 (IPB frame) in compatibility mode.

# Using SunVideo Compatibility Mode

In SunVideo Compatibility (SVC) mode, you can also use the record and playback features of the SunVideo Tool demonstration program that is included in Solaris 2.5.1 and Solaris 2.6.

To set the SunVideo Plus card into SunVideo Compatibility mode:

- 1. Install the SunVideo Plus card in your workstation. See "Unpacking the SunVideo Plus Card" on page 26.
- 2. Install the SunVideo Plus software.

See "Unpacking the SunVideo Plus Card" on page 26.

- **3. Run the SunVideo Plus Compatibility mode setup scripts.** See "Running SVC Mode Scripts" on page 19.
- 4. For Solaris 2.5.1 only, set the XILHOME and LD\_LIBRARY\_PATH environment variables.

See "Setting SVC Environment Variables (Solaris 2.5.1 only)" on page 22.

# **Running SVC Mode Scripts**

After installing the SunVideo Plus card and software, do the following to run SunVideo Compatibility (SVC) mode setup scripts:

- 1. Log in as superuser.
- 2. Run the following scripts:

hostname# svc\_install hostname# svc\_devices (install or remove)

The following table describes the setup scripts.

TABLE 3–1 SunVideo Plus Setup Scripts

Setup Script	Description
svc_install	This script creates the SunVideo Compatibility mode XIL pipeline hierarchy for the SunVideo Plus card.
svc_devices	This script creates (svc_devices install) or removes (svc_devices remove) SunVideo Compatibility mode pseudo devices. Pseudo devices are symbolic links from rtvc (SunVideo) devices to olk (SunVideo Plus) devices. The script places the links into /dev.
svc_uninstall	Solaris 2.6 only. Use this script on Solaris 2.6 to remove the svc hierarchy.

The svc\_install script creates the XIL pipeline hierarchy. The default location for the svc\_install script is /opt/SUNWolkp/bin. The syntax is:

hostname% svc\_install options

SunVideo Compatibility Mode 19

The following table lists and describes the svc\_install options and defaults.

TABLE 3–2	svc_	install	Options	and	Defaults
-----------	------	---------	---------	-----	----------

svc_install <b>Options</b>	Description
-s OlKHOME	This is the location of the SunVideo Plus source directory. The default location is /opt/SUNWolkp.
-t DESTDIR	This is the destination for the SunVideo Compatibility mode pipeline hierarchy. The default location is /opt/SUNWolkp/svc. DESTDIR does not need to exist. The hierarchy requires approximately 360 Kbytes.
-v	This is Verbose mode which displays status information on stdout. The default does not display information.
-x XILHOME	This is the location of the XIL Imaging Library source directory. The default location is /opt/SUNWits/Graphics-sw/xil.

Typically, you can run the script without any options. You must be logged in as superuser if you do not have write permissions to the DESTDIR directory.

If the svc mode is already installed when svc\_install is run, then the previous SVC hierarchy will be removed and then replaced.

You should re-run svc\_install any time packages, patches, and so on, are applied to your system that change XIL components.

In Solaris 2.5.1, the SVC hierarchy is a separate entity that is enabled/disabled by the user by setting environment variables. In Solaris 2.6, however, the SVC hierarchy is not a separate entity. Installing the SVC mode in Solaris 2.6 replaces the existing XIL 1.3 directory containing device handlers (XIL 1.3 libraries) with a SVC mode one. Therefore, once the svc\_install script is run on Solaris 2.6, SVC mode is enabled and is not controlled by setting environment variables. To disable the SVC mode under Solaris 2.6, use the svc\_uninstall script.

The syntax is:

hostname% svc\_install options

The following table lists and describes the svc\_install options and defaults.

TABLE 3-3 svc\_install Options and Defaults

svc_install <b>Options</b>	Description
-v	This is Verbose mode which displays status information on stdout.

Typically, you run the script without any options. You must be logged in as superuser. The script modifies /usr/openwin/xil/lib. You should not run this script if this is an NFS mounted directory.

The svc\_uninstall script removes the SVC mode installed by svc\_install and puts back the original XIL device handler directory.

**Caution** - Since the SVC mode replaces the standard XIL 1.3 device handler directory, it is VERY important to run svc\_uninstall before any updates (that is, patches, upgrades, or new package installations) are applied to your workstation which will change or add XIL components.

The syntax is:

hostname% svc\_uninstall options

The following table lists and describes the svc\_uninstall options and defaults.

TABLE 3-4 svc\_install Options and Defaults

svc_install <b>Options</b>	Description
-v	This is Verbose mode which displays status information on stdout.

SunVideo Compatibility Mode 21

Typically, you run the script without any options. You must be logged in as superuser. The script modifies /usr/openwin/xil/lib. You should not run this script if this is an NFS mounted directory.

The svc\_devices script creates and removes SunVideo compatibility mode pseudo devices in /dev. The default location for the svc\_devices script is /opt/SUNWolkp/bin. The install script syntax is:

hostname% svc\_devices install

The remove script syntax is:

hostname% svc\_devices remove

Use svc\_devices install to install SunVideo Compatibility mode pseudo devices. Use svc\_devices remove to remove SunVideo pseudo devices from the /dev directory.

To select a SunVideo Plus card from a SunVideo application program, use the rtvc pseudo device name, typically /dev/rtvc0.

**Note** - If you use pkgrm to remove the SunVideo Plus software, you do not need to first run the svc\_devices remove script. The pkgrm script removes all pseudo devices.

**Note** - If you move the SunVideo Plus card to a different slot, you must first run svc\_devices remove and then run svc\_devices install.

# Setting SVC Environment Variables (Solaris 2.5.1 only)

Use the special XIL pipelines and SunVideo Plus compatibility features, you must set the XILHOME environment variable to /opt/SUNWolkp/svc.

You must include *DESTDIR*/lib in the LD\_LIBRARY\_PATH environmental variable, where *DESTDIR* is the destination location for the SunVideo compatibility mode pipeline hierarchy. This is the location specified when the svc\_install script was run. The default location for *DESTDIR* is /opt/SUNWolkp/svc.

If the XIL library is already in your LD\_LIBRARY\_PATH, then either *DESTDIR*/lib must precede LD\_LIBRARY\_PATH, or the XIL library path must be removed from your LD\_LIBRARY\_PATH before you attach the new path to LD\_LIBRARY\_PATH.

The following is an example of attaching *DESTDIR*/lib using csh shell:

hostname% setenv OlKHOME /opt/SUNWolkp hostname% setenv LD\_LIBRARY\_PATH /opt/SUNWolkp/lib:\$LD\_LIBRARY\_PATH hostname% setenv LD\_LIBRARY\_PATH /opt/SUNWits/Graphics-sw/lib:\$LD\_LIBRARY\_PATH hostname% setenv XILHOME /opt/SUNWolkp/svc

SunVideo Compatibility Mode 23
## SunVideo Plus Example Programs

This chapter includes SunVideo Plus programming tools and XIL program examples. Included with the SunVideo Plus software is the source code for several example programs. The following table lists and briefly describes each of these. Detailed descriptions of each syntax and related options are then provided. These programs also help verify proper operation of the SunVideo Plus card.

Example Program	Description
swmtool	A tool for installing SunVideo Plus through a GUI.
olk_audrec	A tool for recording audio to file.
olk_audplay	A tool for playing audio files.
olk_audloop	A tool for looping audio IN to audio OUT.
soundtool	A GUI tool for recording, playing and modifying u-law audio files.
xil_compress	An XIL example which captures and compresses video and saves compressed data to a file.
xil_decompress	An XIL example that reads compressed data from file, decompresses it, and displays the decompressed video.
xil_display	An XIL example that captures and displays video.

 TABLE 4–1
 SunVideo Plus Example Programs

25

 TABLE 4-1
 SunVideo Plus Example Programs (continued)

Example Program	Description
xil_video_broadcast/ xil_video_receiver	These are two XIL examples: <i>broadcast</i> transmits over TCP captured and compressed video; <i>receiver</i> receives this video stream, decompresses and displays it.
xil_video_broadcast/ xil_video_receiver	This performs the same functions as the previous example, but adds H.261 protocol to the list of compressed formats.
olk_conf	A point-to-point audio/video conference example built using XIL and the SunVideo Plus audio library.
olk_ctl	A audio and video controller used to alter inputs to SunVideo Plus.

These programs also help verify proper operation of the SunVideo Plus card.

## Audio Recording

The <code>olk\_audrec</code> program is a command-line driven tool for recording audio to a file.

The following shows the command-line syntax for the olk\_audrec example:

hostname% olk\_audrec options -o filename

The following table describes command options and the default setting.

Options	Description and Values	Default
-D device	Device name	/dev/olk0
-f format	Encoding format (0=ULAW, 1=ALAW, 2=PCM8, 3=PCM16, 4=G722)	0

TABLE 4-2olk\_audrec Options

Options	Description and Values	Default
-r rate	Sample rate (8000, 11025, 16000, 22050)	8000
-c channel	Channels (1, 2)	1
-p port	Input port (0=LINE, 1=MIC)	0
-g gain	Input gain (0 1.0)	.125
-m <i>mgain</i>	Monitor gain (0 1.0)	0
-I information	Audio file string information	
-b <i>size</i>	Buffer size	1000
-h <i>amount</i>	Print hash marks after amount	0

 TABLE 4-2
 olk\_audrec Options (continued)

# Audio Playing

The olk\_audplay program is a command-line driven tool for playing audio files. The following shows the command-line syntax for the olk\_audplay example:

hostname% olk\_audplay options -i filename

The following table describes command options and the default setting.

TABLE 4-3 olk\_audplay Options

Options	Description and Values	Default
-D device	Device name	/dev/olk0
-v gain	Output gain (0 1.0)	1.0
-b <i>size</i>	Buffer size	1000

# Audio Looping

The <code>olk\_audloop</code> program is a command-line driven tool used to loop audio IN to audio OUT.

The following shows the command-line syntax for the olk\_audloop example:

hostname% olk\_audloop options

The following table describes command options and the default setting.

 TABLE 4-4
 olk\_audloop
 Options

Options	Description and Values	Default
-⊃ device	Device name	/dev/o1k0
-f format	Encoding format (0=ULAW, 1=ALAW, 2=PCM8, 3=PCM16, 4=G722)	0
-r rate	Sample rate (8000, 11025, 16000, 22050)	8000
-c channel	Channels (1, 2)	1
-p <b>port</b>	Input port (0=LINE, 1=MIC)	0

 TABLE 4-4
 olk\_audloop
 Options
 (continued)

Options	Description and Values	Default
-g gain	Input gain (0 1.0)	.125
-v gain	Output gain (0 1.0)	1.0
-b <i>size</i>	Buffer size	1000

# The soundtool Program

The soundtool program is a GUI tool for recording, playing and modifying u-law audio files (compressed audio files).

The following shows the command-line syntax for the soundtool example:

hostname% soundtool [-D device]

The following figure shows the soundtool demonstration program display.

r <u>-</u>	s	oundtool
(Play)	Play volume 35	(Load)
(Record)	Record volume <u>60</u>	(Store)
(Pause)	Output to: Speaker Jack	Append
Describe)	Looping: Off On	Directory: /tmp
		File:
	Zoom 2	
[		
	]	

Figure 4-1 soundtool Display

soundtool is one of the demonstration programs that is distributed in the SUNWaudmo package. It is typically installed into /usr/demo/SOUND/src/soundtool/. soundtool uses the libaudio audio library and a few system calls (such as open/close, read/write, ioctl and fcntl) to operate on Sun standard hardware and audio devices. The source for the soundtool demonstration distributed with SunVideo Plus software is installed in the example subdirectory of O1KHOME (usually /opt/SUNWo1kp/examples/soundtool).

# Using the SunVideo Plus Control Panel

The SunVideo Plus control panel, olk\_ctl, allows both static and dynamic changes to various audio/video attributes (such as video/audio input selections, audio volume/gain, video brightness, contrast, and so on) for each SunVideo Plus installed in your system.

1. Open the SunVideo Plus Control Panel:

hostname% olk\_ctl

The following figure shows the SunVideo Plus control panel.

Sur	Video Plus Contre	ol Panel	
Volume Gain Mixing	Audio Input		Brightness
	🔽 Line	<u> </u>	Contrast
	Video Input		Нио
	Composite-1		
	Video Format*		Gain-U
	VTSC	<b>—</b> ]—	Gain-V
AES:		*You must resta	t video
Device# 0		for changes in t	these
Query InActive		boxes to take ef	fect.
Update	Defaults) Re	store	(Exit)

*Figure 4–2* SunVideo Plus Control Panel

The settings for each SunVideo Plus device are kept in a database. When changes are made to the various attributes in the control panel, the database for the selected device is modified. Whenever a SunVideo Plus device is opened, the current settings in the database are used to configure the device. While a SunVideo Plus is opened, the control panel will also communicate with the process using the SunVideo Plus device to dynamically change settings.

There are a few settings in the control panel which cannot be dynamically changed and thus only take effect when a SunVideo Plus device is opened. These settings are marked with an asterisk (\*) in the control panel.

The video format may be set to NTSC, PAL, or AUTO. If AUTO is selected, when the SunVideo Plus device is opened, the video format is auto detected. However, since this auto detection can take up to 1.5 seconds, if you know what video format you are using, it is best to set the video format manually.

The Query button is used to dynamically check if a selected SunVideo Plus device is currently opened by another process.

The various attributes on the control panel may also be changed programmatically by a user program. Since these changes can be made by another process while the control panel is opened, the attribute statuses may not always be correct. Clicking the Update button on the control panel updates the current status of the control panel settings.

#### Image Compression

This is a modified XIL example to which H.261 (video) compression was added. See source code notes for specific H.261 code changes. The SunVideo version of this demonstration program can be run under the SunVideo Binary Compatibility Mode without modification (the SunVideo version does not include H261). Note that the default shrink factor is 2 (-s 2) which results in CIF-sized image compression. To compress QCIF-sized images, use -s 4.

The following shows the command-line syntax for the xil\_compress example:

hostname% xil\_compress options -o filename

The following table describes command options and the default setting

TABLE 4–5	xil_	_compress	Options
-----------	------	-----------	---------

Legal Options	Description and Values	Default
-0 % <b>s</b>	Save bitstream in file	NULL
-C %s	Compression type (CellB, JPEG, MPEG1, H261)	CellB
-s % <b>d</b>	Shrink factor	2
-1 % <b>d</b>	Select input channel	1
-f % <b>d</b>	Frames to capture	100
-i % <b>d</b>	Frames to skip between capture	0
-d % <i>s</i>	Name of device	/dev/olk0
-в % <b>d</b>	H261 bitrate, kbits/sec	2000
-Q % <b>d</b>	H261 max quantity	10
-r % <b>d</b>	H261 rate control (0=variable, 1=fixed)	1
Legal Switches		
- E	Exit on first error	

To compress a CIF CellB bitstream, type:

hostname% xil\_compress -C CellB -o /tmp/t.clb

To compress a CIF JPEG bitstream, type:

hostname% xil\_compress -C Jpeg -o /tmp/t.jpeg

To compress a CIF H261 bitstream, type:

To compress a QCIF H261 bitstream, type:

hostname% xil\_compress -C H261 -s 4 -o /tmp/t.h261

## **Image Decompression**

This is a modified XIL example to which H.261 was added. For H.261 decompression, the SunVideo Plus XIL molecules will by default use the first SunVideo Plus card installed in your system for hardware accelerated decode of H.261. If you want to use another SunVideo Plus device for decode, you must explicitly use the -D option.

The following shows the command-line syntax for the xil\_decompress example:

hostname% xil\_decompress options -i filename

The following table describes command options and the default setting

 TABLE 4-6
 xil\_decompress
 Options

Options	Description and Values	Default
-C	Compression type (CellB, JPEG, H.261, Cell, MPEG1)	CellB
-s %d %d	CellB width and height	320, 240
-r % <b>d</b>	Playback frame rate (0 = fast as possible)	0
H261 Options		
-D	Name of SunVideo Plus device for h/w decompression	NULL

To decompress a CellB bitstream, type:

hostname% xil\_decompress -C CellB -s 320 240 -i /tmp/t.clb

To decompress a JPEG bitstream, type:

hostname% xil\_decompress -C Jpeg -i tmp/t.jpeg

To decompress an H261 bitstream, type:

hostname% xil\_decompress -C H261 -i tmp/t.h261

To decompress a H261 bitstream using the second SunVideo Plus card in your system, type:

hostname% xil\_decompress -C H261 -i tmp/t.h261 -D /dev/olk1

### Video Display

This is a modified example of an XIL that captures video and displays it.

Changes to video attributes that affect the color of the image (brightness, contrast, hue, and so on) are also made to the database used by the control panel. Thus, the defaults for these settings depend on how they were last set. If you run this application once and set the brightness to a particular value, this value will be the default setting when you next run a video application.

The following shows the command-line syntax for the xil\_display example:

hostname% xil\_display options

Legal Options	Description and Values Defa		
-s % <b>d</b>	Shrink factor	2	
-I % <b>d</b>	Select input channel	1	
-f % <b>d</b>	Frames to capture	100	
-w % <b>d</b>	Capture subimage width	640	
-h % <b>d</b>	Capture subimage height	480	
-i % <b>d</b>	Frames to skip between capture	0	
-m % <b>d</b>	Maximum frames to buffer	2	
-x % <b>d</b>	x window location	(random)	
-y % <b>d</b>	y window location	(random)	
-D % <i>s</i>	Name of device	/dev/olk0	
Legal Switches			
-a	Enable grayscale mode		
-E	Exit on first error		
-d	Do not display result of capture		
Video Attributes			
-в % <b>d</b>	Brightness none		
-C % <b>d</b>	Contrast none		
-н % <b>d</b>	Hue none		

 TABLE 4-7
 xil\_display Options

 TABLE 4-7
 xil\_display Options (continued)

Legal Options	Description and Values	Default
-∪ % <b>d</b>	Saturation/gain U component	none
-V % <b>d</b>	Saturation/gain V component	none
-c % <b>d</b>	Colormap version (0=XIL std, 1=XIL gamma corrected)	1

The colormap version option does nothing if the current display depth is 24 bits. On 8-bit display depths, it affects which colormap is installed for the video window. The XIL versions cause the SunVideo Plus to capture 16-bit video data which is then dithered in software by the XIL molecules to 8 bits.

To display video, type:

hostname% xil\_display

## Video Broadcast and Video Receiver

These two programs, xil\_video\_broadcast and xil\_video\_receiver, are modified XIL examples which run on the SunVideo Plus card. The SunVideo version of these demonstrations can be run under the SunVideo Binary Compatibility Mode without modification.

The following shows the command-line syntax for the xil\_video\_broadcast example:

hostname% xil\_video\_broadcast options

The following table describes command options and the default setting

Legal Options	Description and Values	Default
-C %s	Compression type (CellB, Jpeg, UYVY)	CellB
-н % <b>s</b>	Destination hostname	local subnet
-c % <b>d</b>	Broadcast channel (0-9)	0
-F % <b>s</b>	File of destination hostnames	none
-D % <b>s</b>	Name of SunVideo Plus device	/dev/olk0
-I % <b>d</b>	Select input channel	1
-₽ %d	Delay x ms per transmit	0
-d % <b>s</b>	Save bitstream in file	NULL
-f %d	Frames to broadcast	18000
-i % <b>d</b>	Frames to skip between capture	0
-m % <b>d</b>	Maximum frames to buffer	2
-s %d	Shrink factor	2
-w %d	Width of capture window	NTSC: 640
		PAL: 768
-h % <b>d</b>	Height of capture window	NTSC: 480
		PAL: 576
-x %d	x coordinate of display window	(random)
-у %d	y coordinate of display window	(random)
Legal Switches		

 TABLE 4-8
 xil\_video\_broadcast
 Options

TABLE 4-8 xil\_video\_broadcast Options (continued)

Legal Options	Description and Values	Default
-p	Disable preview	
-b	Enable display of partial CellB frames by receiver	
-t	Disable transmission	
-E	Exit on first error	
-v	Print verbose messages	

The following shows the command-line syntax for the xil\_video\_receiver example:

hostname% xil\_video\_receiver options

-b

The following table describes command options and the default setting.

TABLE 4-9xil\_video\_receiverOptions

Legal Options	Description and Values	Default
-C %s	Compression type (CellB, Jpeg, UYVY)	CellB
-c %d	Broadcast channel (0-9)	0
-f % <i>d</i>	Frames to broadcast	18000
-x %d	x coordinate of display window	(random)
-y %d	y coordinate of display window	(random)
Legal Switches		

Enable display of partial CellB frames by receiver

TABLE 4-9 xil\_video\_receiver Options (continued)

Legal Options	Description and Values	Default
-E	Exit on first error	
-V	Print verbose messages	

To broadcast/receive video, type:

hostname% xil\_video\_receiver -C CellB hostname% xil\_video\_broadcast -C CellB

# Video Broadcast and Video Receiver for H.261

These two programs, xilh\_video\_broadcast and xilh\_video\_receiver, are modified XIL examples that run on the SunVideo Plus card and use H.261 compression.

The following shows the command-line syntax for the xil\_video\_broadcast example:

hostname% xilh\_video\_broadcast options

The following table describes command options and the default setting

Legal Options	Description and Values	Default
-C % <i>s</i>	Compression type (CellB, Jpeg, H261, UYVY)	CellB
-н % <b>s</b>	Destination hostname	local subnet
-c % <b>d</b>	Broadcast channel (0-9)	0
-F % <b>s</b>	File of destination hostnames	none
-d % <b>s</b>	Name of SunVideo Plus device	/dev/olk0
-I % <b>d</b>	Select input channel	1
-P % <b>d</b>	Delay x ms per transmit	0
-d % <b>s</b>	Save bitstream in file	NULL
-f %d	Frames to broadcast	18000
-i % <b>d</b>	Frames to skip between capture	0
-m % <b>d</b>	Maximum frames to buffer	2
-s %d	Shrink factor	2
-w % <b>d</b>	Width of capture window	NTSC: 640
		PAL: 768
-h % <b>d</b>	Height of capture window	NTSC: 480
		PAL: 576
-x %d	x coordinate of display window	(random)
-y % <b>d</b>	y coordinate of display window	(random)
-в % <b>d</b>	H261 bitrate	256

TABLE 4–10	xilh_	_video_	_broadcast	Options
------------	-------	---------	------------	---------

TABLE 4-10 XIIII_VIGEO_DIOAGCAST OPTIONS (continued)			
Legal Options	Description and Values	Default	
-Q % <b>d</b>	H261 maximum quantization	10	
Legal Switches			
-p	Disable preview		
-b	Enable display of partial CellB frames by receiver		
-t	Disable transmission		
-E	Exit on first error		
-v	Print verbose messages		

TABLE 4-10 xilh\_video\_broadcast Options (continued)

# Audio Video Conferencing

The following shows the command-line syntax for the xil\_video\_receiver example:

hostname% xilh\_video\_receiver options

The following table describes command options and the default setting

Legal Options	Description and Values	Default
-C % <i>s</i>	Compression type (CellB, Jpeg, H261, UYVY)	CellB
-c % <b>d</b>	Broadcast channel (0-9)	0
-f % <b>d</b>	Frames to broadcast	18000

TABLE 4–11	xilh_video	_receiver	Options	(continued)
------------	------------	-----------	---------	-------------

Legal Options	Description and Values	Default
-x % <b>d</b>	x coordinate of display window	(random)
-y % <b>d</b>	y coordinate of display window	(random)
Legal Switches		
-b	Enable display of partial CellB frames by receiver	
-E	Exit on first error	
-v	Print verbose messages	

**Note** - The example program <code>olk\_conf</code> is a point-to-point audio and video conference written in C++ using XIL and the SunVideo Plus audio API. It supports CellB, JPEG, and H261 video formats and various audio formats.

The following shows the command-line syntax for the olk\_conf example:

hostname% olk\_conf options

The following table describes command options and the default setting

TABLE 4–12	olk_	_conf	Options
------------	------	-------	---------

Legal Options	Description and Values	Default
-u % <b>s</b>	user@host	NULL
-t	Disables XIL molex (Sol;airs 2.6 only)	
-p	For receiving PAL format.	
-D %s	Name of SunVideo Plus device	/dev/olk0

- XIL 1.2 in Solaris 2.5.1 is not multithreading safe. The conference example uses multiple threads that access XIL. The threads lock out each other before they make XIL calls. This is not efficient, but required due to XIL 1.2. In Solaris 2.6, XIL 1.3 is multithreading safe. The -t option is used to disable the locking used by the conference application.
- The -p option should be used if you know the call will be sent by PAL format. If you do not use this option if sending PAL formats, errors will occur.

The following figure shows the main conference panel:



Figure 4-3 olk\_conf Main Conference Panel

This allows for configuration of audio/video parameters and provides an address book for storing information about users you want to connect.

To open the address book, click the Address button. The following figure shows the Address Book.



Figure 4–4 Address Book

A user is added by selecting the New button. The most important information is the User@Host field. This is used to contact another person when placing a conference call. The other information in the Address Book is optional. After filling in the user information, click on the Add button (which is only displayed after the new button is selected). To save your address book, select Save in File menu. To select a user for a conference, select the user in the list, and then click the Done button. This closes this pop-up window and places the User@Host name in the Main Conference Panel (Figure 4–3).

Only the user calling the conference needs to configure the Main Conference Panel because when a conference is called, the far end is told of the caller's configuration. The default configuration for <code>olk\_conf</code> is

- Video: H261, QCIF, 10fps, 256 Kbits/sec
- Audio: *u*law, 8 KHz, mono

To change the conference configuration, click Setup, and proceed through the menus and pop-up window directions.

When called by an another user, a pop-up window opens that informs you who is calling and the parameters of the call (see figure below). You may then decide if you care to join the conference.

	Being	ı Called	
User@Host_gino@beckatori			
Audio Format Video Format			
Type:	ULAW	Type:	<u>H261</u>
Channels:	MONO	Size:	QCIF
Sample Rate:	8 KHz	Frame Rate:	10 fps
Do you accept this call? Yes No			

*Figure 4–5* Being Called Window

During the conference, you can monitor status information, like audio and video bit rates and frame rates and network packet activity, by View from the Main Conference Panel. Then select A/V Panel for audio and video parameters that you can change in the audio/video panel.

During a conference call, you will have two windows on your display, a Local View and a Far View (the person you are conferencing). The figure below shows these two windows.



Figure 4–6 Local View and Far View Windows

With H.261, a picture-in-a-picture is possible on the Far View window, with your view inlayed in the top-left corner. To reduce CPU use, you can switch your local view to an icon. This is advisable during an H261 conference.

When you have completed your conference call, click HangUp. The HangUp button is displayed on the Main Conference Panel after a call is placed.

## XIL Attributes for SunVideo Plus

This chapter describes the XIL attributes that are specific to SunVideo Plus. This information assumes that you are familiar with the concepts of video compression and imaging and the related XIL functions that are described in the *XIL Programmer's Guide*.

XIL operates through a deferred execution scheme. Deferred execution looks for specific sequences of atomic operations that can be grouped into molecules to reduce execution time. The molecules that are accelerated are listed in the "Molecules" section in this chapter. Refer to the *Solaris XIL 1.0, Imaging Library Programmer's Guide* for more information on general XIL programming. Source code to various XIL examples are included as part of the developer kit. These examples give developers a good start in using XIL and the SunVideo Plus card.

MMAColk is the XIL software driver for the SunVideo Plus card. The interface to MMAColk is through the following XIL calls:

- xil\_device\_create(3)
- xil\_device\_set\_value(3)
- xil\_create\_from\_device(3)
- xil\_get\_device\_attribute(3)
- xil\_set\_device\_attrribute(3)

For xil\_device\_create(3), the device parameter should be MMAColk. For xil\_create\_from\_device(3), the devicename parameter should be MMAColk, and the deviceObj parameter can be a NULL, in which case /dev/olk0 is opened. To open another device such as /dev/olk1, create a MMAColk device, set the DEVICE\_NAME attribute with xil\_device\_set\_value(3) with this device. The image returned will be a 640x480 (NTSC) or 768x576 (PAL) 3-banded YUV image.

49

## **Attributes Overview**

To support binary compatibility, some of the SunVideo attributes that do not have particular applicability for SunVideo Plus are supported on a limited basis.

There are two methods for setting device attributes. The first method is to call the xil\_device\_create(3) and xil\_device\_set\_value(3) functions prior to creating the device image with the xil\_create\_from\_device(3) function. The second method is to call xil\_device\_set\_value(3) after calling xil\_create\_from\_device(3). Certain attributes require that they be set with the first method (such as DEVICE\_NAME) and are documented as such in the following sections. See "Important Attribute Information" on page 55 for addition information.

The following general device attributes are available with the  $\tt MMAColk$  device and are also supported by SunVideo:

- DEVICE\_NAME
- FORMAT
- IMAGE\_SKIP
- PORT\_V
- MAX\_BUFFERS
- PORT
- NUM\_BUFFER
- FIRST\_SCANLINE
- FULL\_BUFFERS
- FLUSH\_BUFFERS
- FORMAT\_V

The following device attributes have no affect, but are either ignored or handled by SunVideo Plus in a reasonable way to support binary and source compatibility with SunVideo.

- MPEG\_RATE\_CONTROL
- MPEG\_FIXED\_QUANT
- MPEG\_WEIGHTS
- FILE DESCRIPTOR
- FRAME\_NUMBER
- TIMESTAMP

The following are SunVideo Plus video attributes:

- HUE
- 50 SunVideo Plus 1.3 User's Guide 

  September 1999, Revision A

- H261\_PIP
- CHROMA\_GAIN\_V
- CHROMA\_GAIN\_U
- BRIGHTNESS
- CONTRAST
- H261\_BIT\_RATE
- H261\_MAX\_QUANT
- H261\_IBLOCK\_REFRESH
- H261\_FUR

The following sections describe the attributes in more detail. Note that some attributes are "set-only" and others are "get-only." This is noted under the ACCESS heading for each attribute. Some of these attributes are also parameters in the SunVideo Plus control panel. Although default values are given, the true default value is the value last made in either the control panel or by a previous XIL set attribute call. These attributes have an asterisk (\*) before there DEFAULT entry. See "The SunVideo Plus Control Panel and XIL Attributes" on page 57 for more information.

## **General Attributes**

This attribute sets the path name of the olk (SunVideo Plus) device. You must set this attribute using the xil\_device\_create(3) and xil\_device\_set\_value(3) functions prior to creating the device image.

Access: set/get Type: char \* Default: "/dev/o1k0"

This attribute defines which of the three ports will capture the video signal.

0	S_VIDEO port
1	Composite Video #1 port
2	Composite Video #2 port

Access: set/get Type: int Default: 1

This attribute is a string interface to set the port.

XIL Attributes for SunVideo Plus 51

S VIDEO	S_VIDEO port
COMPOSITE VIDEO 1	Composite Video #1 port
COMPOSITE VIDEO 2	Composite Video #2 port

Access: set/get Type: char \* \* Default: "COMPOSITE VIDEO 1"

This attribute returns 0 if the format is unknown, 1 if capturing from PAL, and 2 if capturing from NTSC. See "Video Ports, Formats, and Auto Format Detection" on page 72 for more information.

Access: get Type: int

This attribute returns the video format being captured (NTSC, PAL, or UNKNOWN). See "Video Ports, Formats, and Auto Format Detection" on page 72 for more information.

Access: get Type: char \*

This attribute sets and returns the number of images to skip between captures. You can use the IMAGE\_SKIP attribute to pace the flow of images. For example, an application that supports security cameras could use the attribute to provide images at 30-second intervals.

Another example is to use IMAGE\_SKIP when you want to limit the frame rate to match a particular network bandwidth. To capture NTSC frames at a rate of approximately 10 fps, you would set the IMAGE\_SKIP attribute to 2. This causes the SunVideo Plus card to capture every third frame.

Access: set/get Type: intDefault: 0

This attribute sets and returns the maximum number of compressed frames that the XIL SunVideo Plus driver will hold while waiting for an application to retrieve via a compress call. The value must be in the range between 1 and 10. See the figure below. The value is clipped to provide the number of buffers that fit in the available memory.



*Figure 5–1* Maximum Number of Buffers

This attribute returns an integer that specifies the actual number of buffers that can be used to hold compressed frames. The NUM\_BUFFERS value is less than or equal to the value of the MAX\_BUFFERS attribute.

The NUM\_BUFFERS attribute returns a valid value after the first capture (or capture/compress) operation has been performed.

Access: set Type: integer

This attribute returns an integer that specifies the current number of buffers that contain valid data. The FULL\_BUFFERS attribute returns a valid value after the first capture (or capture/compress) has been performed.

Access: get Type: integer

If the FLUSH\_BUFFERS attribute is set, then all saved buffers are flushed before the next image is captured. After the operation completes, the value of FULL\_BUFFERS is set to zero. The input value of the set attribute call is ignored.

Access: set Type: void

#### Video Attributes

The following attributes affect various video characteristics. Note that these can be controlled programmatically through XIL or through the SunVideo Plus control panel described in "Using the SunVideo Plus Control Panel" on page 47. Although default values are given here, the true default value is the value last set by either the control panel or by XIL program control.

This attribute affects the color hue of the incoming video signal.

Access: set/get Type: int (range -128 to +127) \* Default: 0

This attribute affects color gain of the U component of the incoming video signal.

XIL Attributes for SunVideo Plus 53

This attribute affects color gain of the V component of the incoming video signal. Access: set/get Type: int (range 0 to 511) \* Default: 180

This attribute affects the contrast of the luma portion of the incoming video signal. Access: set/get Type: int (range 0 to 511) \* Default: 216

This attribute affects the overall brightness level of the luma portion of the incoming video signal.

Access: set/get Type: int (range -128 to +127) \* Default: 0

#### H.261 Attributes

These attributes are specific to SunVideo Plus when used in conjunction with H.261 compression or decompression. They have no effect if not performing hardware-based compression or decompression.

This attribute sets the desired maximum compression bit rate. The rate is in bits per second of units of 1000. For example, the default value of 256 produces a maximum bit rate of 256000 bits per second (32000 bytes/sec).

Access: set/get Type: int (in kbits/sec) Default: 256

This attribute sets the desired maximum quantization. As the quantization factor is lowered, the compressed image quality improves. Since a lower quantization generally results in an increase in bits-per-image, the frame rate for a given bit rate can decrease. The opposite is true for increasing quantization.

Access: set/get Type: int (range: 1 to 31) Default: 10

This attribute sets the desired period in milliseconds before the compressor should update a given H261 macroblock with an intra-encoded block. H261 requires that each macroblock be encoded as an intra-encoded block every 132 frames. If

<sup>54</sup> SunVideo Plus 1.3 User's Guide 

September 1999, Revision A

compressing at 10 fps, this implies that a given block may not be intra-encoded for up to 13 seconds. On a lossy network, a loss of a frame results visually in distorted blocks in the decompressed image. Waiting for up to 13 seconds for these bad blocks to refresh is probably not acceptable. The purpose of this attribute is to speed up the refresh of macroblocks during lossy transmission of H261 streams over networks.

Access: set/get Type: int Default: 1500 (msec)

Setting this flag issues a fast update request to the H.261 compressor. The fast update is basically the request for an intra/key frame.

Access: set/get Type: XIL\_boolean Default: FALSE

This flag tells the H.261 decoder to inlay a picture of the local view in the top-left corner of the decompressed image. If not performing hardware compression, the pip image is gray.

Access: set/get Type: XIL\_boolean Default: FALSE

This attribute selects which CIS hardware accelerated decompression should be performed on. The default value of NULL implies that the first CIS encountered by a decompression molecule is targeted for hardware accelerated decompression. Once a CIS has been selected, any other CIS encountered by hardware decompression molecules will be rejected and the decompression will occur through the appropriate XIL software decoder. A value of -1 is a good value to use to disable hardware-based decompression.

Because XIL has no mechanism for informing the decompressor when a CIS is destroyed, this attribute must also be set in order to perform hardware accelerated decompression on a new CIS.

Access: set/get Type: XilCis Default: NULL

#### **Important Attribute Information**

Note - XIL 1.3 attributes do not support get attribute at this time.

The default behavior of the XIL drivers is to auto detect the video format on the selected video port during device image creation. This auto detect sequence can take

XIL Attributes for SunVideo Plus 55

up to 1.5 seconds to complete. If you know the video format, the video format in the SunVideo Plus control panel can be set from AUTO to the known format (NTSC or PAL). Auto format detection is not performed in this case.

The SunVideo Plus does not currently support having two different video formats (such as NTSC or PAL) on different video ports and switching between them dynamically. When the device image is created in an XIL application, the SunVideo Plus drivers will possibly auto detect the video format on the selected video port. For this reason, it is best to set the desired video port using *xil\_device\_set\_value*(3) prior to creating the device image if you do have different video formats plugged into the various video input ports. You should also do this if you do not have video plugged into the default video port (port 1).

The HW\_DECOMPRESS\_CIS attribute can be used to selectively set which CIS should use hardware accelerated decompression. An application which is going to be decompressing multiple CIS should set this attribute to -1 before any XIL decompress molecules are performed. This keeps a decompress molecule on a CIS that you do not want to hardware decode from attaching itself to the hardware. Before performing a decompress molecule on the CIS that you do want to use hardware decompression on, set the HW\_DECOMPRESS\_CIS attribute.

When performing hardware based decompression, the SunVideo Plus acts like an XIL compute device in that it is accelerating an XIL molecule. For applications that use decompression only, it is not necessary to create an xil device and device image as described in "Creating a Sample MMAColk Device Image" on page 59. The exception to this is when an application wants to set a device specific attribute that affects decompression. There is no method in XIL of setting certain types of attribute on a compute device like the SunVideo Plus, short of opening the device explicitly and then setting the attribute. Thus, to use such attributes, you must create an xil device and image. See "XIL Source Examples" on page 59 for more information.

If a device and device image are not created directly by an application, the hardware-based SunVideo Plus XIL decompression molecules will do this implicitly. However, the molecules do not currently *hunt* for a available hardware device to use as an accelerator. They currently attempt to use the first device in a system (/dev/olk0). Thus, if multiple SunVideo Plus cards are installed in your system, the only current way to use each as a hardware-accelerated decompression device is to explicitly create a device and device image in an application and use a different device name for each device creation. See "XIL Source Examples" on page 59 for more information.

The previous section explained that the hardware decompression molecule of SunVideo Plus will implicitly create a device and device image if one has not already been created. Thus, if an application performed a decompress molecule and then

created an MMACo1k device and device image, it would receive the device and image previously created implicitly by the decompress molecule. However, there is a problem in XIL with respect to deleting the device image. For this reason, if both hardware compression and decompression are to occur in an application, then the application is required to explicitly create a device and device image before the first hardware decompress molecule occurs.

All of the video related parameters in the SunVideo Plus control panel have XIL attributes that enable an application developer to programmatically change these parameters. These attributes in XIL do not have default values because the default value is the current value set by the control panel. Thus, unless an application explicitly sets a given video attribute, the control panel value is used.

This is a feature of SunVideo Plus. It removes the responsibility of setting video parameters (such as brightness, contrast, and so on) out of an XIL application. Thus, end users can tune these video parameters for their video source once and not have to deal with making the same changes each time they run an XIL application.

Note that the source for both of these XIL attributes and the parameter in the control panel is the same. Therefore, making a change to one of these parameters through an XIL set attribute call will also change the value in the control panel. For example, if an XIL application sets the brightness to a given value and then exits, the next XIL application that is run will use this new brightness setting unless it also sets a new value.

#### Molecules

The following lists the color and grayscale molecules that the MMACo1k device currently supports.

- Color Molecules
  - capture > scale8nearest
  - capture > [scale8nearest >] colorconvert
  - capture > [rescale8>][scale8nearest>] ordereddither8\_8
  - capture > scale8nearest > rescale8 > orderedditther8\_8
- Compression Molecules
  - capture > [scale8nearest] compress\_CellB
  - capture > [scale8nearest] compress\_Jpeg
  - capture > [scale8nearest] compress\_Mpeg1
  - capture > [scale8nearest] compress\_H261

XIL Attributes for SunVideo Plus 57

- capture > [scale8nearest] compress\_UYVY
- Grayscale Molecules
  - capture > scale8nearest
  - capture > [scale8nearest > [[addconst8 >] addconst8 >] addconst8
  - capture > [scale8nearest][threshold8 >] threshold8
  - capture > [scal8nearest][threshold8 >] threshold8 > addconst8
- Decompression Molecules
  - decompress\_H261
  - decompress\_H261 > [rescale8 >] ordereddither8\_8
  - decompress\_H261 > colorconvert
  - decompress\_H261 > [rescale8 >] ordereddither8\_8 > display\_ioSUNWgx

#### Errors

The following table lists MMAColk device driver error messages.

 TABLE 5-1
 MMAColk Error Messages

Error Message	Description
MMAColk-1	MMAColk: invalid PORT specification
MMAColk-4	MMAColk: could not open MMAColk device. The reason for the failure is printed in the default error handler. Possible causes include:
	- The device is being used by another program.
	- The device is not installed.
	- The program is referencing the wrong device number.
MMAColk- $5$	MMAColk: could not set video characteristics. The program is not able to set the port characteristics.
For a list of other XIL error messages, see Appendix B of the XIL Programmer's Guide.	

# Creating a Sample MMAColk Device Image

Create a device image attached to a SunVideo Plus card, and set the video port to be COMPOSITE VIDEO 2. To do this, type:

# XilImage image
# XilDevice image

where image = xil\_create\_from\_device(state, "MMAColk", device); device =
xil\_device\_create(state, "MMAColk") xil\_device\_set\_value(device,
 "DEVICE\_NAME", (void \*) "/dev/olk0"); xil\_device\_set\_value(device,
 "PORT", (void \*) "COMPOSITE VIDEO 2")

## **XIL Source Examples**

The best source of information about programming using the XIL programming interface is within the XIL examples provided in the developer kit. The following table lists these examples.

 TABLE 5-2
 XIL Source Examples

XIL Source Example	Description
xil_display	A video capture and display example. This example could be easily modified to be a video recorder or player.
xil_compress	A video compression example. This example shows how to compress and save to disk various compression formats. It also illustrates setting device-specific attributes such as the bitrate setting for H.261.

XIL Attributes for SunVideo Plus 59

 TABLE 5-2
 XIL Source Examples (continued)

XIL Source Example	Description
xil_decompres:	An example of how to perform video decompression. For the most part, this example does not require a hardware based entity to provide decompression since XIL software decoders will do the work implicitly. The example does show, however, how to use the SunVideo Plus hardware-based H261 decompression.
xil_broadcast	This example shows how to capture and compress video and a method for broadcasting this video over a network using UDP.
xil_receive	This example shows how to receive video from xil_broadcast and how to decompress and display it.
xilh_broadcas	t Same as xil_broadcast, but adds H261.
xilh_receive	Same as xil_receive, but adds H261.
olk_conf	A GUI point-to-point conference application that uses XIL and libotiaudio.
## Glossary

acoustic echo suppression CellB	For conferencing to be effective, systems must be able to mitigate the impact of echo caused by the loudspeaker audio feeding back into the microphone. The AES algorithm used in SunVideo Plus disables variations caused by double-talk creating consistent echo attenuation. A non-proprietary video codec (compression-decompression) format that provides high quality, low bit-rate image compression that can be easily and efficiently decoded in software. CellB is based on Block Truncation Coding (BTC) encoding.
G.711	The G.711 standard, also called Pulse Code Modulation (PCM). A standard method of converting analog signals to digital signals. Typically used in public and private telephone networks, G.711 samples analog data and prepares it for transmission.
G.722	A wide-band (high quality) algorithm with a bandwidth of 50 Hz to 7 KHz. G.722 provides the audio encoding and decoding standardization needed at 48 Kbps, 58 Kbps, or 64 Kbps. Used when high-quality speech is necessary.
G.728	Another low-bitrate audio encoding algorithm. Using a standard analysis-by-synthesis CELP method, G.728 provides toll-quality speech at 16 Kbps.
H.261	The video component of the H.320 video conferencing standard intended for use on communication lines that have multiples of 64-Kbit capacity.
JPEG	The Joint Photographic Experts Group (JPEG) standard consisting of a host of algorithms for still image compression.
MPEG	The Moving Picture Experts Group.

Glossary-61

MPEG-1	The first MPEG standard, MPEG-1 is geared for CD-ROM and T1
	bit-rate transmission. At 1.5 Mbits/second, the algorithm uses both
	interframe and intraframe coding to achieve quality video at a
	lower bandwidth.

PCM Pulse Code Modulation. See G.711.